


Gripper


These are the specifications for the standard gripper, which is sold as an option. The gripper uses the Dynamixel XM430-W210 actuator.

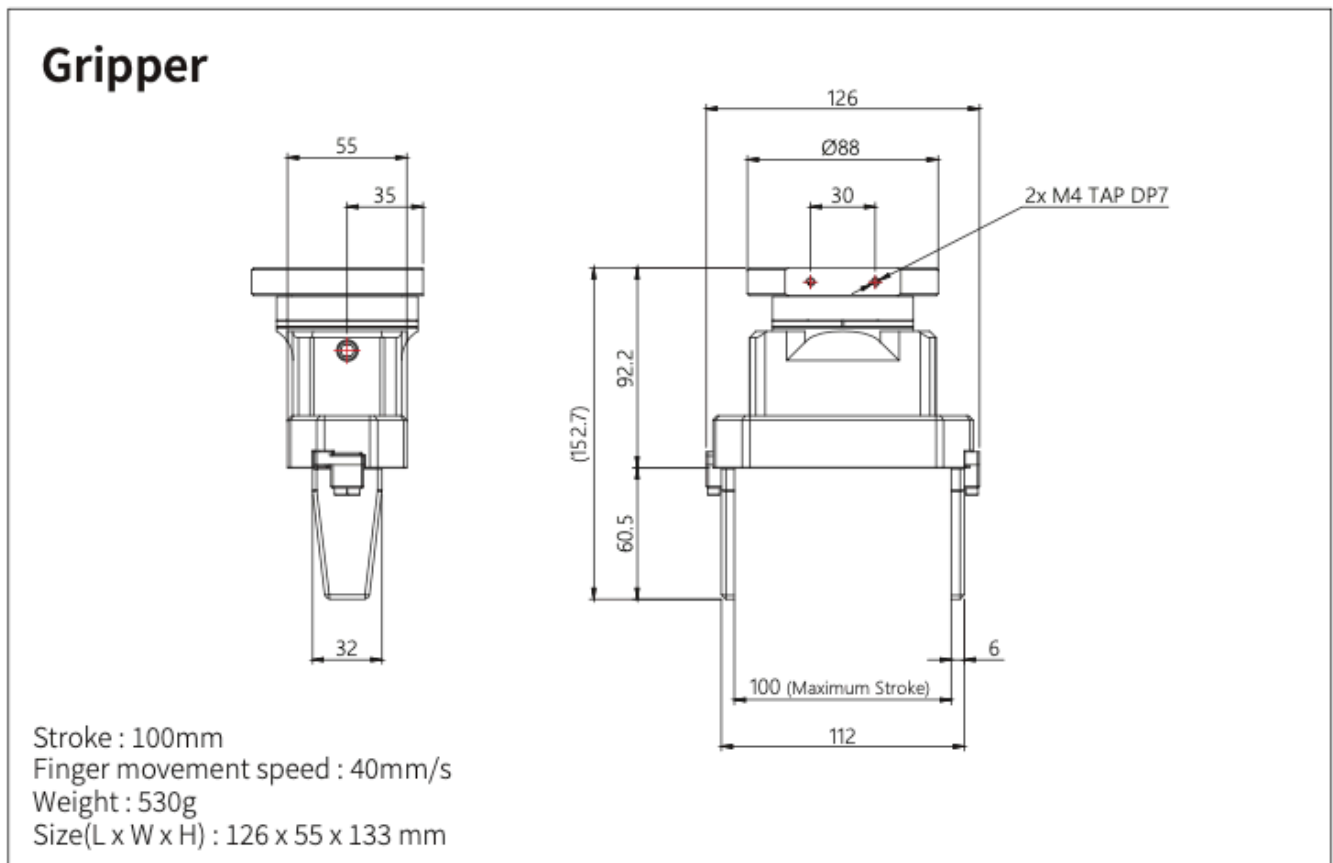

The default settings for the Dynamixel are shown in the image below. If these settings are maintained, the [examples/cpp/module_test/gripper.cpp](#) code can be used without modification. (The gripper on the right hand is set to ID 0, and the gripper on the left hand is set to ID 1.)

Address	Item	Decimal	Hex	Actual
0	Model Number	1030	0x0406	XM430-W210
2	Model Information	0	0x00000000	
6	Firmware Version	48	0x30	
7	ID	1	0x01	ID 1
8	Baud Rate (Bus)	4	0x04	2 Mbps
9	Return Delay Time	50	0x32	100 [μsec]
10	Drive Mode	0	0x00	
11	Operating Mode	0	0x00	Current control
12	Secondary(Shadow) ID	255	0xFF	Disable
13	Protocol Type	2	0x02	Protocol 2.0
20	Homing Offset	0	0x00000000	0.00 [°]
24	Moving Threshold	10	0x0000000A	2.29 [rev/min]
31	Temperature Limit	80	0x50	80 [°C]
32	Max Voltage Limit	160	0x00A0	16.00 [V]
34	Min Voltage Limit	95	0x005F	9.50 [V]
36	PWM Limit	885	0x0375	100.00 [%]
38	Current Limit	250	0x00FA	672.50 [mA]
44	Velocity Limit	330	0x0000014A	75.57 [rev/min]
48	Max Position Limit	4095	0x00000FFF	359.91 [°]
52	Min Position Limit	0	0x00000000	0.00 [°]
60	Startup Configuration	0	0x00	
63	Shutdown	20	0x14	

The gripper is connected to the body's IO port via the bypass port mounted on the wrist. As shown in the image below, the cable can be connected in a way that allows the use of the RS485 to USB device (U2D2) installed in the PDU. (UPC DP ↔ BP0 / UPC DN ↔ BP1)

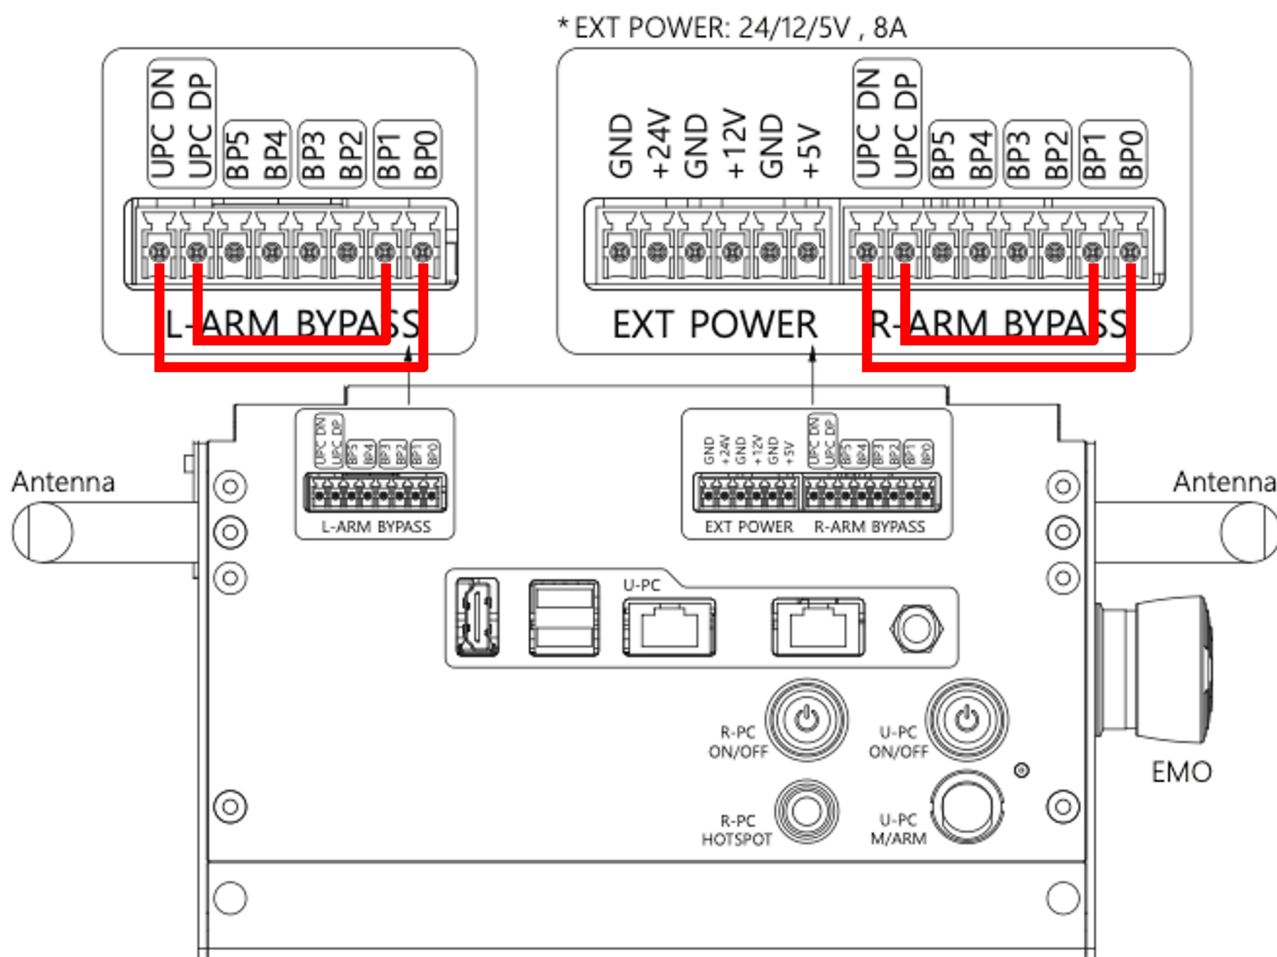

Previous page
[Robot Main Program](#)

Next page
[Master-Arm](#)